



LYSAGHT® TRIMDEK® Installation Guide



DESIGN
FLEXIBILITY



DURABILITY /
SECURITY



HI-TECH
PRODUCTION



RECYCLING



COLOUR
CHOICES



THERMAL
EFFICIENCY




WARRANTY



1. GENERAL ROOFING INSTALLATION PROCEDURE


- Prior to commencement of fixing, the installer should ensure that purlins, girts or battens are truly in place and that the slope requirements are met. Any adjustments found necessary should be made prior to proceeding with fixing, as they will be difficult or impossible to rectify later.
- When lifting sheets on to the roof frame ready for laying and fastening, care should be taken to make sure all sheets are the correct way up with the overlapping side towards the edge of the roof from which installation will commence. Otherwise sheets will have to be turned over and/or turned end for end. Sheet bundles should be placed over or near purlin supports, not at mid span of the purlins.
- The first sheet should be positioned with particular care before fastening, to ensure that it lies straight and square and is correctly located in relation to order building elements:
 - i. Transversely in relation to the barge-fascia or end-wall, bearing in mind the type of flashing or capping treatment to be used;
 - ii. Longitudinally in relation to gutter and ridge or barge-fascia or parapet or transverse wall.
- Roof sheets should overhang about 50mm into gutters.

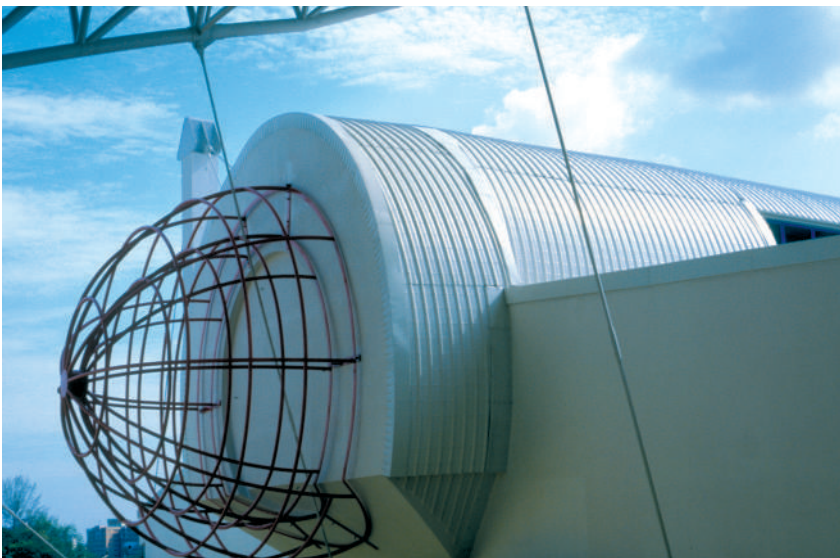

Choa Chu Kang Sport Complex, Singapore

2. INSTALLATION OF LYSAGHT® TRIMDEK®

- When lifting roofing sheets earlier onto roof frames, ready for installation, make sure either all male or all female ribs facing the same direction, otherwise sheets will have to be turned end-for-end during fixing.
- The first sheet of LYSAGHT® TRIMDEK® must be positioned with care before fastening with hex head self-tapping screws to ensure that it lies straight and square.
- When the first sheet is fastened in position, a string line can be stretched across the lower end of the roof alignment. The line will then be used as a guide for the subsequent roof panel for installation.
- Position and fasten the next roofing sheet to each support the male rib of the installed sheet. Place the second sheet over the second run of the roofing sheets and fastened the sheets together before proceeding to the next sheet.
- Make sure the side lapping is installed correctly. The side rib with the longitudinal anticapillary flute (male rib) supposed to be covered by the side rib without a longitudinal flute (female rib).

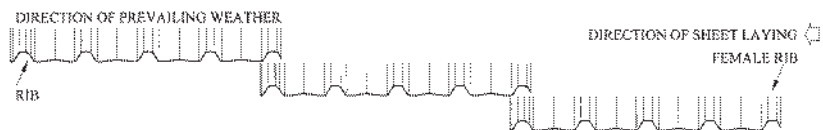

- Each sheet should be fully fastened before proceeding to the next sheet. The side lap with preceding sheet should be fastened last.
- In the case that two or more

shorter sheets installed to provide full-length coverage due to handling or transport considerations, lay each complete line of sheets in turn from gutter/eaves to ridge.

TIPS FOR INSPECTION

- ✓ Identify the type of roofing profile used
- ✓ Look out for any sign of corrosion to perforation
- ✓ Look out for any detachment of fasteners from roof and steel purlins/ structures
- ✓ Look out for any detachment of related flashing and capping
- ✓ Look out for roof penetrations such as vent pipes and trapdoors if there is any water stagnation
- ✓ Look out for any debris left during construction such as screws, nails and other other trades debris
- ✓ Look out for the type of lightning conductor used (lead and copper are non- compatible materials)
- ✓ Look out for disengagement of LYSAGHT® TRIMDEK® roof panel from each other
- ✓ Look out for deteriorated sealant used
- ✓ Look out for wall and flashing/capping abutments
- ✓ Look out for end laps and side laps of roof and flashing/capping



Fixing of walling applications is similar to roofing



Trusted Partner for Building Systems

NS BLUESCOPE LYSAGHT MALAYSIA SDN BHD

NO 6, PERSIARAN KEMAJUAN, SEKSYEN 16,
40200 SHAH ALAM,
SELANGOR DARUL EHSAN, MALAYSIA.

TEL: 603-5520 6600 FAX: 603-5520 6601 / 02

NORTHERN

1-2-9, KRYSTAL POINT CORPORATE PARK,
JALAN TUN DR. AWANG,
LEBUH BUKIT KECIL 6,
11900 SUNGAI NIBONG,
PENANG, MALAYSIA.

TEL: 604-646 9553 / 6653 FAX: 604-646 6855

SOUTHERN

235, JALAN MURNI 11,
KAWASAN PERINDUSTRIAN MURNI,
81400 SENAI,
JOHOR, MALAYSIA.

TEL: 607-598 7600 FAX: 607-598 7604

NS BLUESCOPE LYSAGHT SABAH SDN BHD

LORONG KURMA OFF JALAN KOLOMBONG,
88450 KOTA KINABALU,
SABAH, MALAYSIA.

TEL: 6088-445 161 FAX: 6088-421 178

**NS BLUESCOPE LYSAGHT (SARAWAK) SDN BHD
KUCHING**

LOT 610, SECTION 66, PENDING INDUSTRIAL AREA,
JALAN MERBAU, 93450 KUCHING,
SARAWAK, MALAYSIA.

TEL: 6082-333 621 FAX: 6082-483 486

BINTULU

LOT 974, BLOCK 26 KLD,
KIDURONG LIGHT INDUSTRIAL ESTATE,
97000 BINTULU, SARAWAK, MALAYSIA.

TEL: 6086-251 736 FAX: 6086-252 881

NS BLUESCOPE LYSAGHT SINGAPORE PTE LTD

(Formerly known as BlueScope Lysaght (Singapore) Pte Ltd.)

18 BENOI SECTOR,
JURONG TOWN,
SINGAPORE 629851

TEL: 65-6264 1577 FAX: 65-6265 0951

www.lysaght.com.sg

NS BLUESCOPE LYSAGHT (BRUNEI) SDN BHD

INDUSTRIAL COMPLEX,
BERIBI PHASE 1,
6KM, JALAN GADONG,
BANDAR SERI BEGAWAN BE 1118,
BRUNEI DARUSSALAM.

TEL: 673-244 7155 FAX: 673-244 7154

www.bluescopelysaght.com.bn

www.lysaght.com.my

mysupport@bluescope.com

For more information, please contact:

1700-81-8688



Copyright © 2014 by BlueScope Steel Limited. All rights reserved. No part of this brochure shall be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without written permission from BlueScope Steel Limited. LYSAGHT®, ZINCALUME®, COLORBOND® and TRIMDEK® are registered trademarks of BlueScope Steel Limited. BlueScope is a trademark of BlueScope Steel Limited.

* Warranty terms and conditions apply.